
## HydraMax® Product Installation Guide

2 Bucket System



### System at a Glance

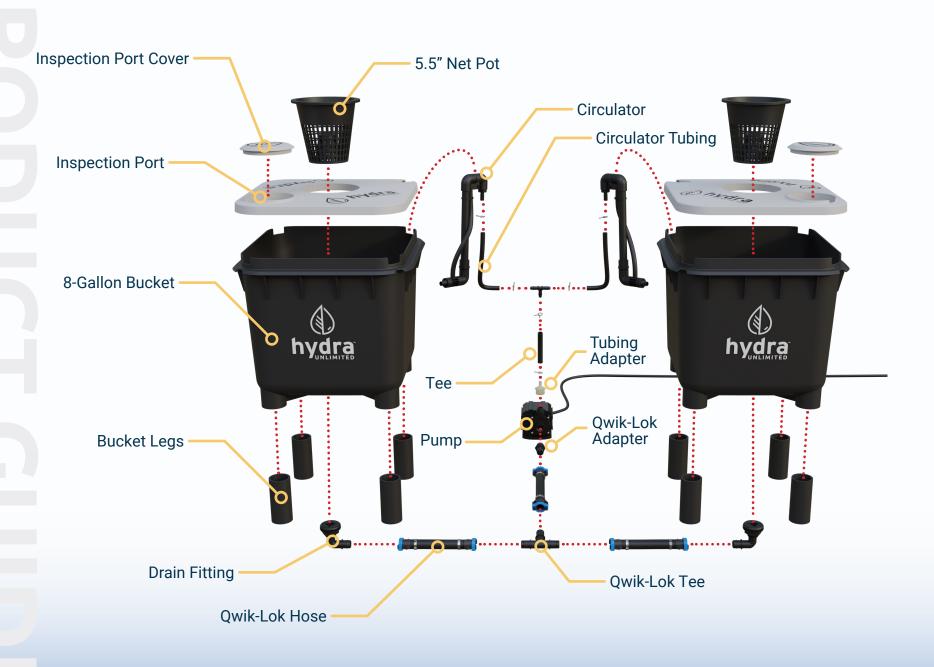

# Circulator **Circulator Tubing Spring Clamp Tubing Adapter** Pump **Qwik-Lok Adapter**

### **Pump Assembly**

Start by applying Teflon tape to the pump adapters, then assemble the parts as illustrated. Before pushing the tubing over the barbs of the pump, tee and circulator, place spring clamps on both ends of the tubing. Finally, slide the spring clamps over the barbs to secure the tubing in place.



Apply 2-3 wraps of Teflon tape to the threads as shown.



Tigten the adapter to the pump until they are snug. Do not over-tighten.

### **Bucket Assembly**





Insert the drain fitting with gasket from inside the bucket and tighten the nut below.



Insert each leg into the bucket and then press or tap the bucket onto a level surface to ensure that each leg is fully seated.

### Final Assembly

Remember to slide spring clamps onto the hoses before pushing the hose over the barb. Then, slide the spring clamp over the barb.




Lower the circulator into the the bucket, mating the bracket to the recessed lip in the corner.


Attach Qwik-Lok hoses to the drain fittings, then to the Tee. Attach the last hose from the tee to the pump. Slide all the locking rings into the locked position.



### **Qwik-Lok Operation**

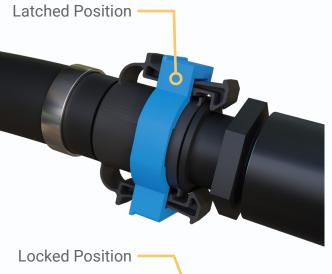

To connect a Qwik-Lok hose, with the blue ring in the "latched" position, simply push the hose onto the fitting.

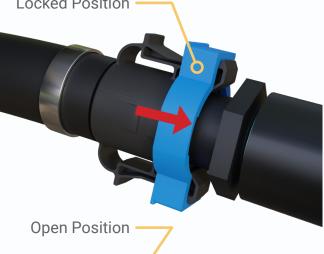

Once connected, slide the blue ring to the "locked" position.

To disconnect, hold the blue ring with two fingers and pull the hose off of the fitting in one motion.