



Hydra Tower

Assembly Manual


Hydra 32 (HA-215)

Hydra 16 (HA-216)



Contents

The illustration on this page shows all the parts included with your Hydra Tower. It also shows an overview of how they are assembled. The following pages further detail the assembly process.

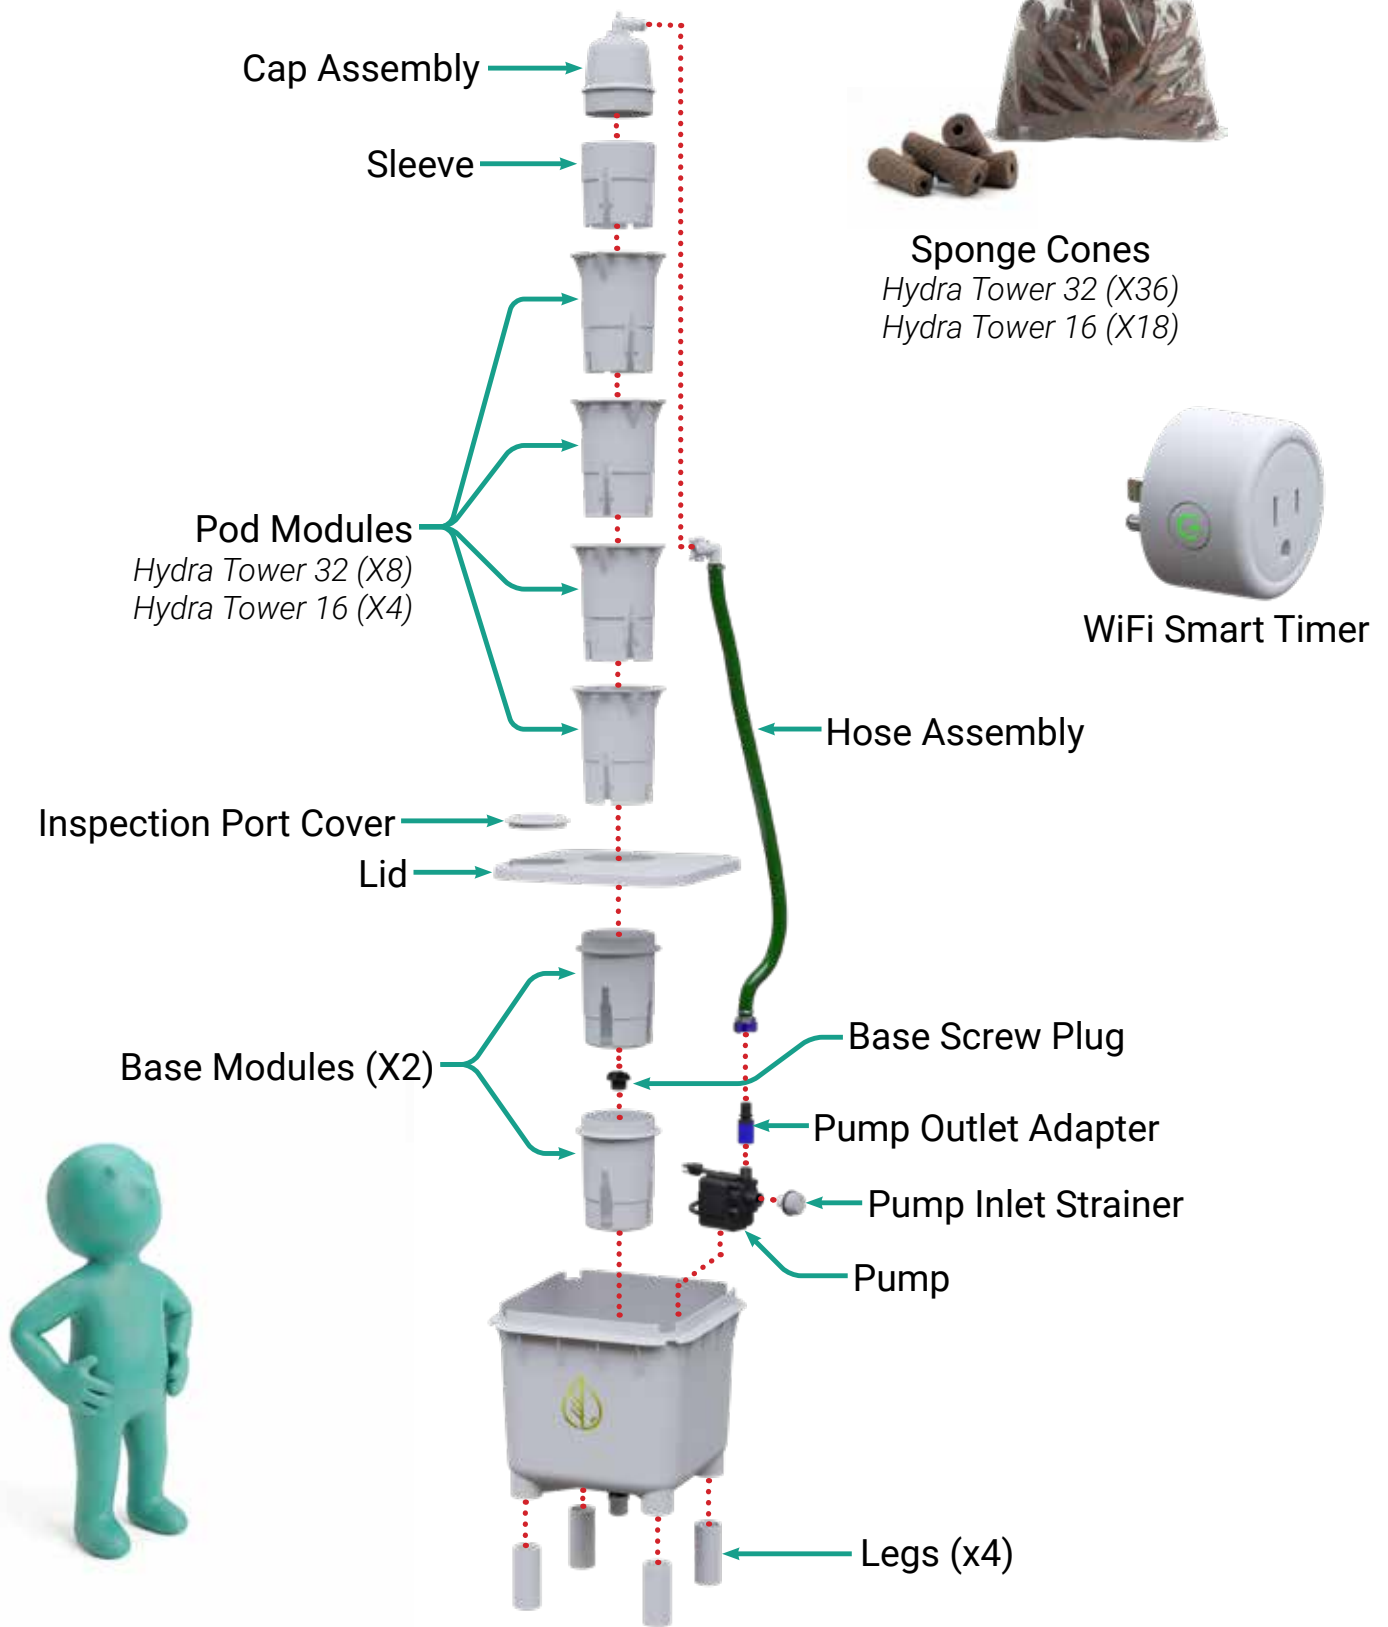

Note: Before starting assembly, wipe each part with a clean, dry cloth to remove any dust. Then sort and check all parts against the parts list to confirm you have everything needed.

The Bucket


With the **Bucket Assembly** upside down on a soft surface, insert each of the 4 **Legs** into the receptacles as shown. Flip the bucket upright and push the bucket down to make sure the legs are fully seated.



Lower Base Module

Center a **Base Module** over the drain fitting and secure in place with a **Base Screw Plug**



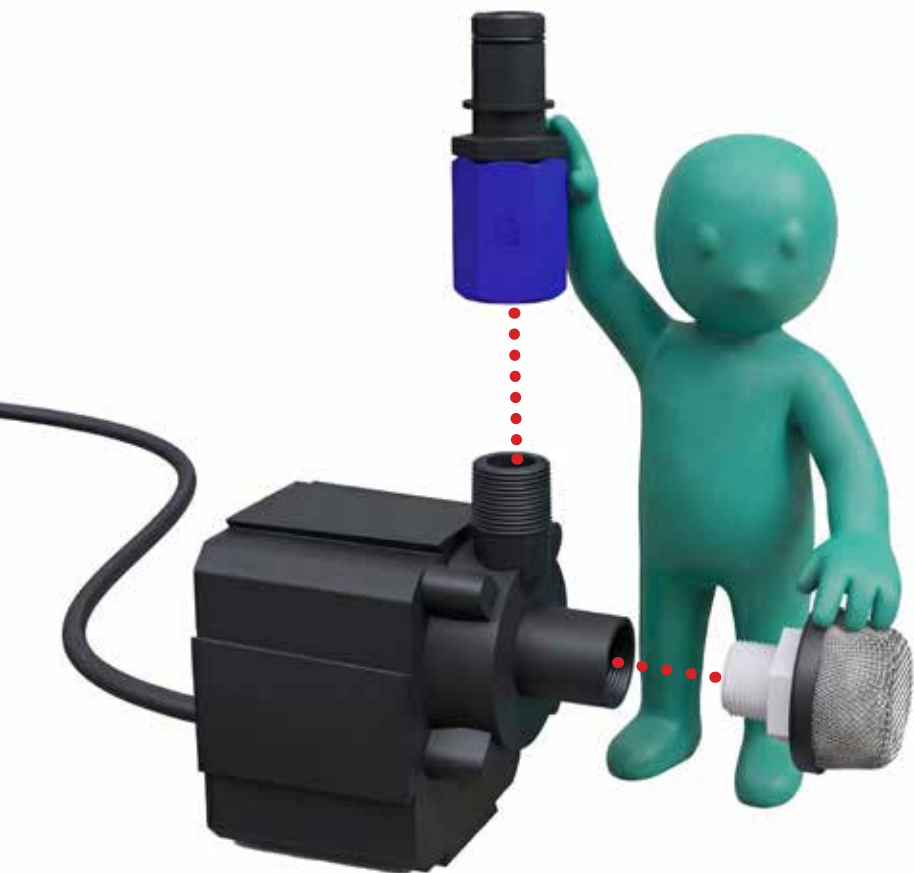

The Pump

Screw the **Pump Inlet Strainer** into the inlet of the **Pump**. Do not overtighten.

Screw the **Pump Outlet Adapter** onto the outlet of the **Pump**.


Lower the pump assembly into the bucket. Hang the power cord over the corner as shown.





The Hose Assembly

Attach the gray and blue end of the **Hose Assembly** to the outlet of the **Pump**. Once the hose is fully in place, slide the blue lock ring down to the locked position as shown.

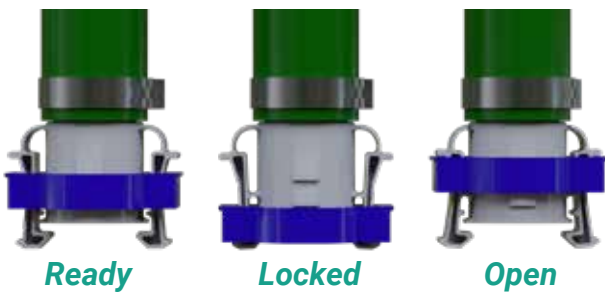

Attach the Qwik-Lok connector in the **“Ready”** position. Then slide the lock ring to the **“Locked”** position.

To remove, grab the lock ring, and in a single motion, slide it back to the **“Open”** position and remove the connector.





Upper Base Module

Insert the remaining **Base Module** into the first one until firmly seated.



Lid & Inspection Port Cover

Place the **Lid** on the **Bucket** with the upper **Base Module** centered in the hole.

Be sure the hose and power cord are positioned in the corner slot as shown.

Place the **Inspection Port Cover** on the inspection port.



Pod Modules


Insert a **Pod Module** into the **Base Module**. Rotate the module until it slips easily into the the module below it. Do this for the remaining **Pod Modules**.



Upper Assembly


In the same manner, insert the **Sleeve** into the **Pod Module**.

Insert the **Cap Assembly** and rotate it to align with the **Hose Assembly** coming out of the **Bucket** below.

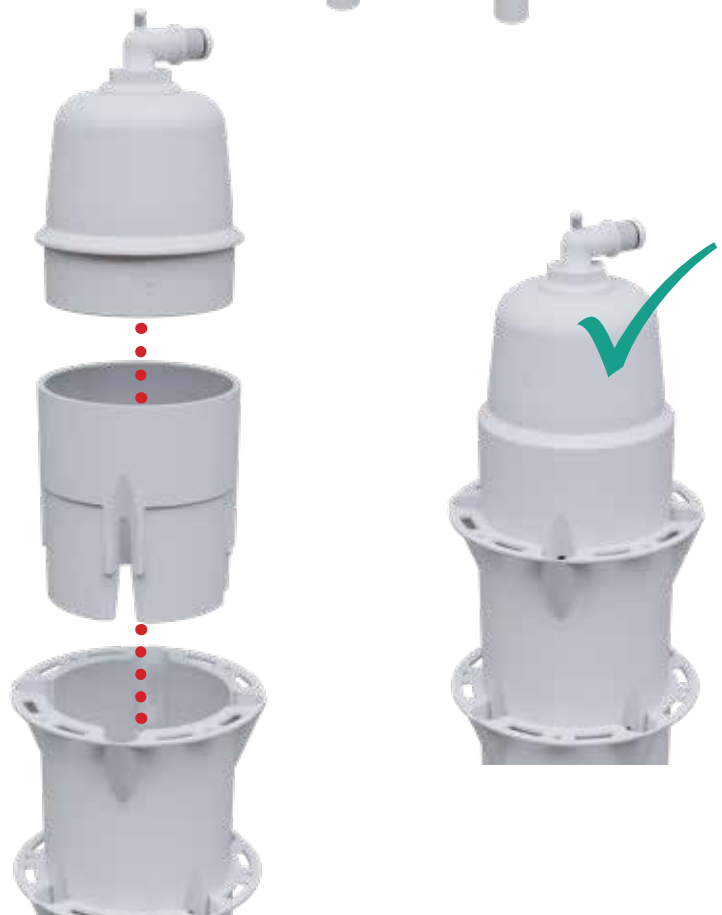

Final Connection

Attach the white end of the *Hose Assembly* to the Aerator on the *Cap Assembly*.

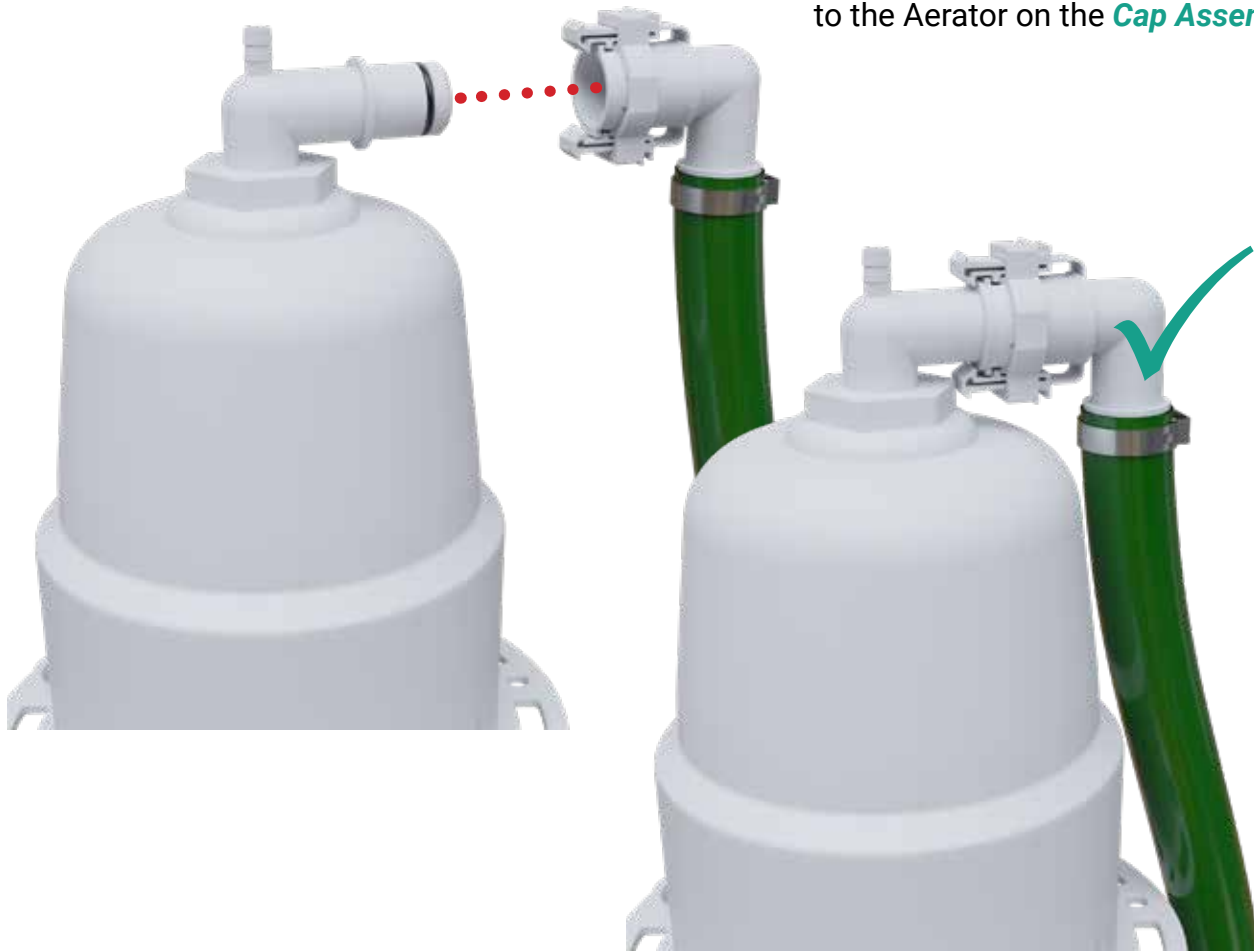

Slide the white lock ring forward to the locked position.





WiFi Smart Timer Setup

Download and install the Gosund app from the Apple APP Store or Google Play.

Open the APP and create an account.

Turn on the plug and put it close to the router when pairing.

Press and hold the ON/OFF button for 5 seconds and release it when the plug starts blinking fast to enter the network pairing mode.

Tap “+” on the upper right corner and select “Auto Scan”.

Follow the APP instructions to complete the operation.



GHome Digital Manual

For more information or to connect the timer to a third party device such as Amazon Alexa or Google Assistant, scan the QR code below to access the manufacturer’s digital manual.





hydra[®]
UNLIMITED